

# English

Supplement to the translation of the original instructions for ekey home  
AF ID132/221 – ID184/342/0/185

---

## Deviations from the enclosed translation of the original instructions

The corrected translation of the original instructions can be downloaded via the following link: <http://www.ekey.net/downloads/cat/Anleitungen>.

### Wiring check

You can check the wiring of the system as long as you have not enrolled any administrator fingers: Once normal mode has been activated, place your finger on the finger scanner and leave it there for 3 seconds. The relay switches.

### Administrator fingers

Administrator fingers are not just used for system programming. They can also open doors (like user fingers).

### Accessing the Admin menu



To access the Admin menu, give the sensor 3 finger touches within 5 seconds.

### Finger enrolment

Swipe the administrator or user finger over the sensor in order to enrol it. Repeat this step at least twice.

After 3 finger touches of the sensor to access the Admin menu, you must swipe the first administrator finger over the sensor within 30 seconds.

During finger enrolment, no more than 10 seconds must elapse between each finger enrolment. For user fingers, finger enrolment is aborted after 10 scans.

When the finger scanner is restarted, if admin mode is active and no user fingers are present, all administrator fingers are deleted; if Bluetooth is defined, the coupling code is reset to 9999.