
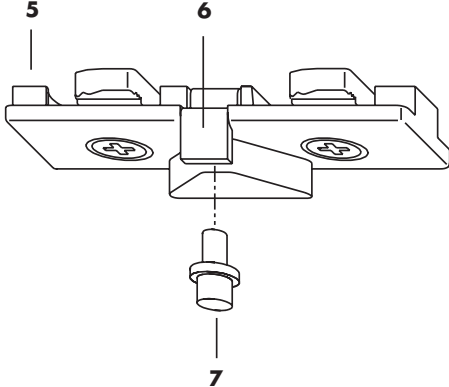
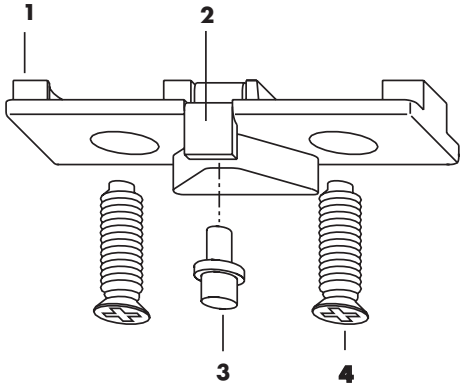


# ALU accessories

**Screwable night vent ALU A0004**  
**Clampable night vent ALU A0006**

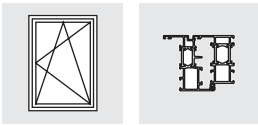

Pos.	Qty.	Description	Material no.
	<b>1</b>	<b>Night vent ALU A0004</b>	<b>818848</b>
1	1	striker SP	833957
2	1	striker plate SP	819470
3	1	rivet	800836
4	2	countersunk screw M5 x 19	800867
	<b>1</b>	<b>Night vent ALU A0006</b>	<b>818855</b>
5	1	striker SP A0006	833940
6	1	striker plate SP	819470
7	1	rivet	800836


**Size range** (depending on hardware)

sash width (mm)	stay ALU 5200/4200
430 - 630	20
631 - 1250	35
1251 - 1600	35 with addit. stay ALU

	meas. A	meas. B
A0004	14	3
A0006	10	3,5

This dimensional specification of the eurogroove for aluminium windows and doors is valid for the accessories to the SIEGENIA fittings.

In addition the system manufacturers specifications must be observed.

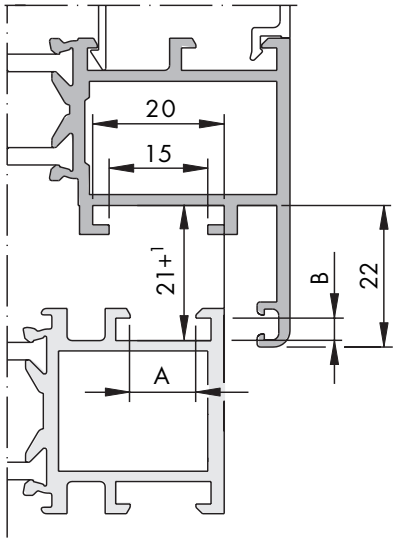







ALU-Euronut

**Installation instructions**  
H48.ZUBHLS011en

# Night Vent ALU - Installation Instructions, Important Notes

## Installation instructions

<b>Preparation</b>	<b>A</b>	Drill holes for striker SP (1) A0006 on frame according to picture 1 (drill Ø 4,2).
	<b>B</b>	Drill hole in operating rod S3 (Ø 5,2) according to picture 4.
<b>Sash</b>		Press rivet (3/7) into the operating rod S3 (Ø 5,2) and rivet in place (picture 4).
<b>Frame (A0004)</b>	<b>A</b>	Insert striker plate SP (2) in groove of the striker SP (1), (picture 3).
	<b>B</b>	Position striker SP (1) on the frame (picture 1) and fix with countersunk screws M5 x 19 (4) (torque $2,5 \pm 0,25$ Nm).
	<b>C</b>	Bring handle into night vent position in order to check proper functioning of the fitting part (picture 5).
<b>Frame (A0006)</b>	<b>A</b>	Insert striker plate SP (6) into groove of the striker SP (5) (picture 3).
	<b>B</b>	Position striker SP (5) on the frame (picture 1) and fix.
	<b>C</b>	Bring handle into night vent position in order to check proper functioning of the fitting part (picture 5).

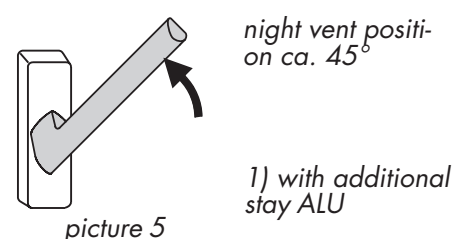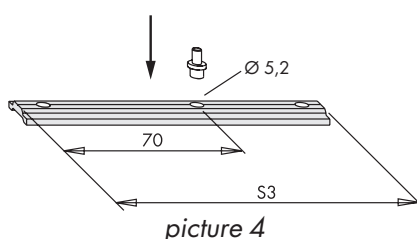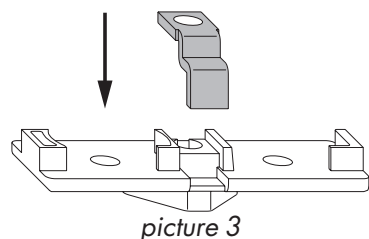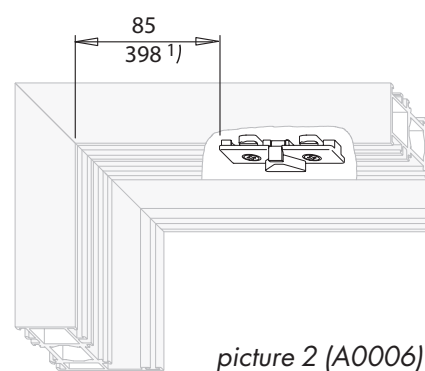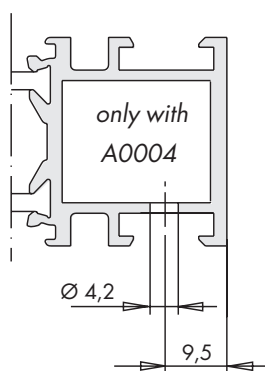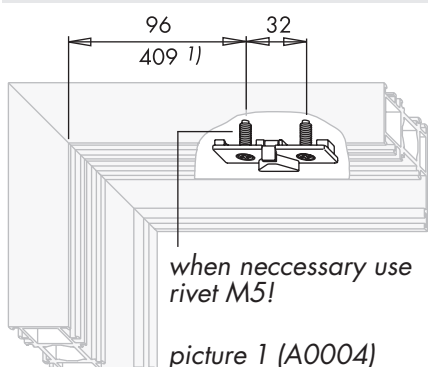

## Important notes

- Please take note of our Product information for windows and doors.
- The specifications for size range given in installation instructions are also valid for the components described in this document.
- The fittings described in this instruction are made of non corroding materials. They must not be installed for use in aggressive corrosion promoting air conditions.
- Do not use SIEGENIA-fittings with other parts; otherwise difficulties can arise for which we cannot be held responsible.
- Assemble the components as described in this installation leaflet.
- The surfaces of windows and doors should be treated (i.e. painted) prior to the assembly of the fittings.
- Post-treatment of the surfaces can be detrimental to the function of the fittings.

In this case we are released from the obligations of our guarantee.

## Liability Exclusion

We accept no liability in respect of any damages or malfunctions caused by or to the hardware or the windows fitted with them, as a result of incorrect and inappropriate specifications or other information provided by the customer, failure to follow these instructions, wilful damage or negligence or misuse or alteration or repair of or an exertion of excessive force to the hardware by the user or customer.